



ARIUS YDP-164, YDP-144, YDP-S54 Quick Operation Guide

While holding down the applicable button, press one of the highlighted keys shown below to select a Demo Song or set a parameter.

1 Song playback

DEMO/SONG +

Quick Play **Demo Songs** **50 Preset Songs (50 Classical Music Masterpieces) Song number** **Song Data Loaded from the Computer**

A#-1	C#0	D#0	F#0	G#0	A#0	C#1	D#1	F#1	G#1	A#1	C#2	D#2	F#2	G#2	A#2	C#3	D#3	F#3	G#3	A#3	C#4	D#4	F#4	G#4	A#4	C#5	D#5	F#5	G#5	A#5	C#6	D#6	F#6	G#6	A#6																										
Off	On					Mellow Grand	Stage E.PIano	Vibraphone	Jazz Organ	Strings	1	2	4	7	9	11	13	14	16	17	18	19	21	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	1st Song	2nd Song	3rd Song	4th Song	5th Song	6th Song	7th Song	8th Song	9th Song	10th Song
A-1	B-1	C0	D0	E0	F0	G0	A0	B0	C1	D1	E1	F1	G1	A1	B1	C2	D2	E2	F2	G2	A2	B2	C3	D3	E3	F3	G3	A3	B3	C4	D4	E4	F4	G4	A4	B4	C5	D5	E5	F5	G5	A5	B5	C6	D6	E6	F6	G6	A6	B6	C7										

* 50 Preset Songs (50 Classical Music Masterpieces) Song number / Song name

1 Canon D dur	11 Salut d'amour op.12	21 Prelude (Wohltemperierte Klavier I No.1)	31 Etude op.10-3 "Chanson de l'adieu"	41 Humoresque
2 Air On the G String	12 From the New World	22 Menuett G dur BWV Anh.114	32 Etude op.10-12 "Revolutionary"	42 Arietta
3 Jesus, Joy of Man's Desiring	13 Sicilienne	23 Piano Sonata No.15 K.545 1st mov.	33 Valse op.64-1 "Petit chien"	43 Tango (España)
4 Twinkle, Twinkle, Little Star	14 Clair de lune	24 Turkish March	34 Nocturne op.9-2	44 The Entertainer
5 Piano Sonata op.31-2 "Tempest" 3rd mov.	15 Jupiter (The Planets)	25 Piano Sonata op.13 "Pathétique" 2nd mov.	35 Nocturne KK4a-16/BI 49 [Posth.]	45 Maple Leaf Rag
6 Ode to Joy	16 Menuett (Eine kleine Nachtmusik K.525)	26 Für Elise	36 Träumerei	46 La Fille aux Cheveux de Lin
7 Wiegenlied op.98-2	17 Menuett G dur	27 Piano Sonata op.27-2 "Mondschein" 1st mov.	37 Barcarolle	47 Arabesque No.1
8 Grande Valse Brillante	18 Marcia alla Turca	28 Impromptu op.90-2	38 La prière d'une Vierge	48 Cakewalk
9 Polonaise op.53 "Héroïque"	19 Piano Concerto No.1 op.11 2nd mov.	29 Frühlingslied op.62-6	39 Liebesträume No.3	49 Je te veux
10 La Campanella	20 The Nutcracker Medley	30 Fantaisie-Impromptu	40 Blumenlied	50 Gymnopédies No.1

2 Voice settings


PIANO/VOICE +

Voices **Reverb Types** **Reverb Depth** **Damper Resonance** **Stereophonic Optimizer** **Volume Balance (Dual/Duo mode)** **Octave Shift (Dual/Duo mode)** **Touch Sensitivity**

A#-1	C#0	D#0	F#0	G#0	A#0	C#1	D#1	F#1	G#1	A#1	C#2	D#2	F#2	G#2	A#2	C#3	D#3	F#3	G#3	A#3	C#4	D#4	F#4	G#4	A#4	C#5	D#5	F#5	G#5	A#5	C#6	D#6	F#6	G#6	A#6																
						Mellow Grand	Stage E.PIano	Vibraphone	Jazz Organ	Strings	Concert Hall	Club	Off	1 step down	Default setting	1 step up	Off	On	Off	On						1 step down	1 step up	-1 (Voice 2)	+1 (Voice 2)	-1 (Voice 1)	+1 (Voice 1)	Soft	Hard	Medium	Fixed																
A-1	B-1	C0	D0	E0	F0	G0	A0	B0	C1	D1	E1	F1	G1	A1	B1	C2	D2	E2	F2	G2	A2	B2	C3	D3	E3	F3	G3	A3	B3	C4	D4	E4	F4	G4	A4	B4	C5	D5	E5	F5	G5	A5	B5	C6	D6	E6	F6	G6	A6	B6	C7

ARIUS YDP-164, YDP-144, YDP-S54 Quick Operation Guide

3 Metronome settings

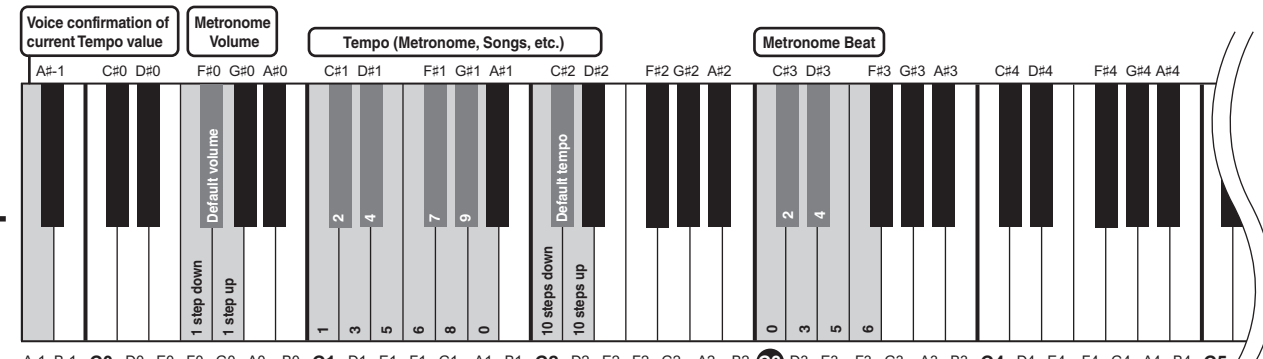

Voice confirmation of current Tempo value

Metronome Volume

Tempo (Metronome, Songs, etc.)

Metronome Beat

METRONOME +

To increase the value by 1:


METRONOME + [R]

To decrease the value by 1:

METRONOME + [L]

A#-1 B-1 C0 D0 E0 F0 G0 A0 B0 C1 D1 E1 F1 G1 A1 B1 C2 D2 E2 F2 G2 A2 B2 C3 D3 E3 F3 G3 A3 B3 C4 D4 E4 F4 G4 A4 B4 C5

4 Other settings

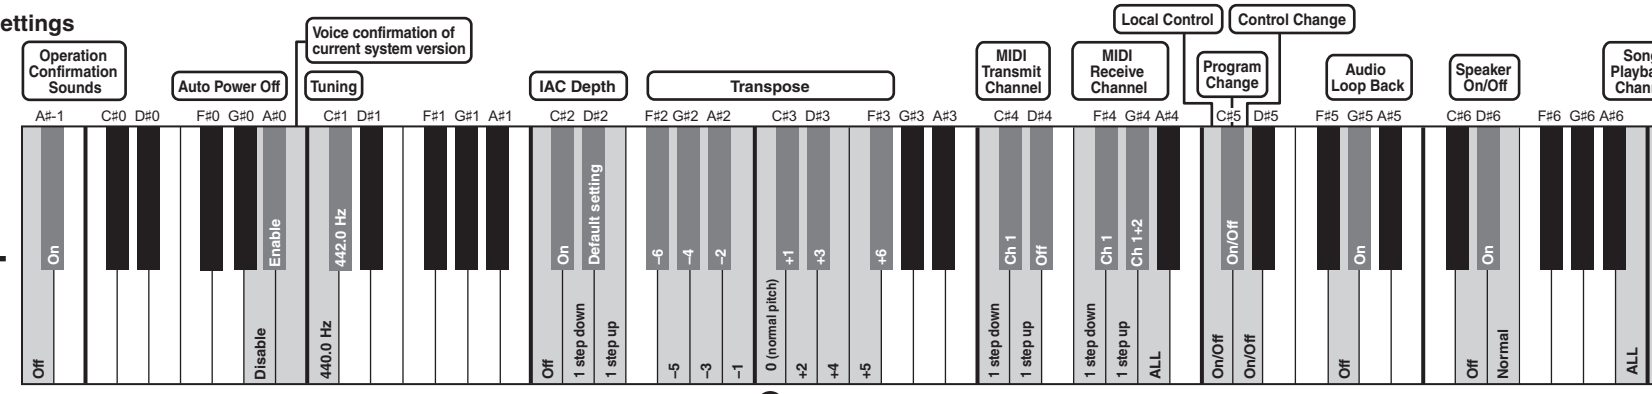

Operation Confirmation Sounds

Auto Power Off

Voice confirmation of current system version

Tuning

IAC Depth

Transpose

Local Control

Control Change

MIDI Transmit Channel

MIDI Receive Channel

Program Change

Audio Loop Back

Speaker On/Off

Song Playback Channel

DEMO/SONG + PIANO/VOICE

Off On

Disable Enable

440.0 Hz 442.0 Hz

Off 1 step down 1 step up

-6 -4 -2 +1 +3 +5 +6

Ch 1 Off

Ch 1 Ch 1+2 ALL

On/Off On/Off

Off On

Off Normal


ALL Ch 1+2

A#-1 B-1 C0 D0 E0 F0 G0 A0 B0 C1 D1 E1 F1 G1 A1 B1 C2 D2 E2 F2 G2 A2 B2 C3 D3 E3 F3 G3 A3 B3 C4 D4 E4 F4 G4 A4 B4 C5 D5 E5 F5 G5 A5 B5 C6 D6 E6 F6 G6 A6 B6 C7


5 Tuning settings

While holding down the [DEMO/SONG] and [PIANO/VOICE] buttons, press the [+R], [-L] or both buttons as shown below to fine-tune the pitch of your instrument.


To tune up (in about 0.2 Hz steps):

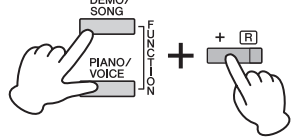

To tune down (in about 0.2 Hz steps):

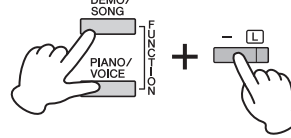

Default pitch: 440.0 Hz

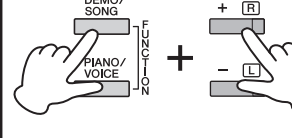

6 Duo setting

While holding down the [PIANO/VOICE] button, simultaneously press the [+R] and [-L] buttons to turn Duo on or off.

To turn Duo on or off:

