



Application for iPhone/iPod touch/iPad

E3 Controller

User's Guide

Disklavier E3

Disklavier Control Unit DKC-850

Introduction

Thank you for downloading!

This application is designed to enable remote control of a Disklavier E3 or DKC-850.

Compatible devices


iPad 2 / iPad / iPhone 4S / iPhone 4 / iPhone 3GS

iPhone 3G / iPod touch (4th generation, 3rd generation, 2nd generation)

* iOS 4.2 or later is required.

Requirements

- Disklavier E3 Version 3.20 or later, or DKC-850 Version 3.20 or later
- Wireless router

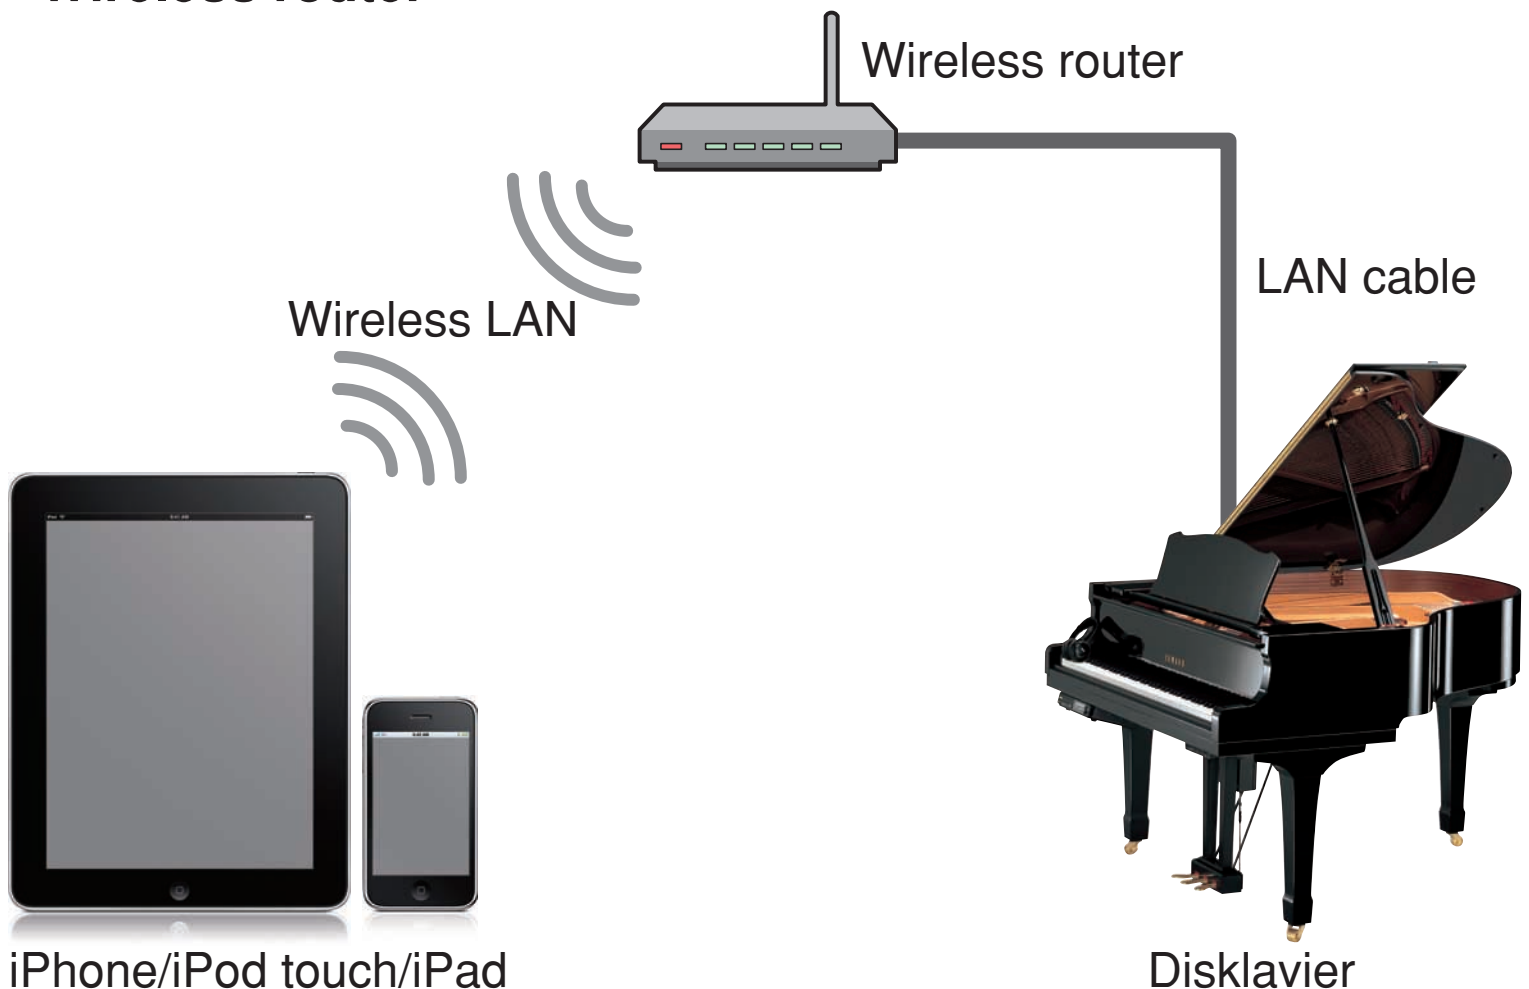

Introduction

Usage note

- Connect Disklavier to the wireless router by LAN cable and choose that same network in the Wi-Fi setting of iPhone/iPod touch/iPad.
- If the wireless router has several local networks, confirm that the Disklavier and the iOS device are connected to the same LAN.
For more detail, refer to the manual that came with your wireless router.

Table of Contents

Button Contrast

Basic View.....	3
Scroll Area	6
Pop-Up View	10


Other Features

Landscape View	13
Option View.....	14
Piano Search	15
Passcode View	17
Help View	18

Troubleshooting.....	20
----------------------	----

Button Contrast

Basic View

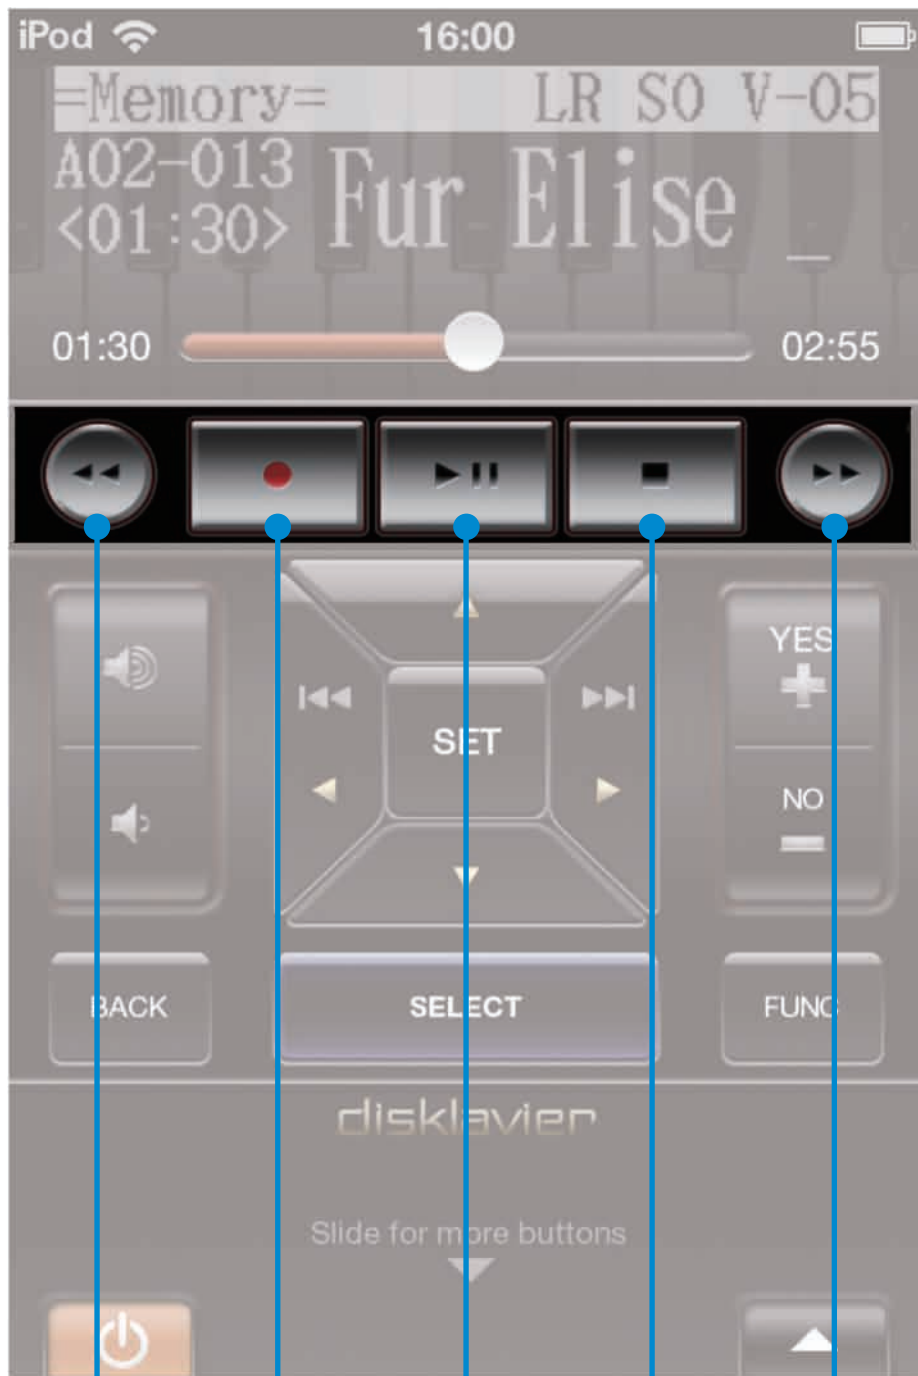

[REVERSE] button

[RECORD] button

[PLAY/PAUSE] button

[STOP] button

[FORWARD] button



Button Contrast

Basic View



[+ / YES] / [- / NO] buttons

[SET] button

Cursor buttons

[VOLUME] buttons

Button Contrast

Basic View



[FUNC] button

[SELECT] button

[BACK] button

[ON/STANDBY] button

Button Contrast


Scroll Area



There is a pull-down area in the basic view which reveals additional buttons as described next.

Button Contrast

Scroll Area

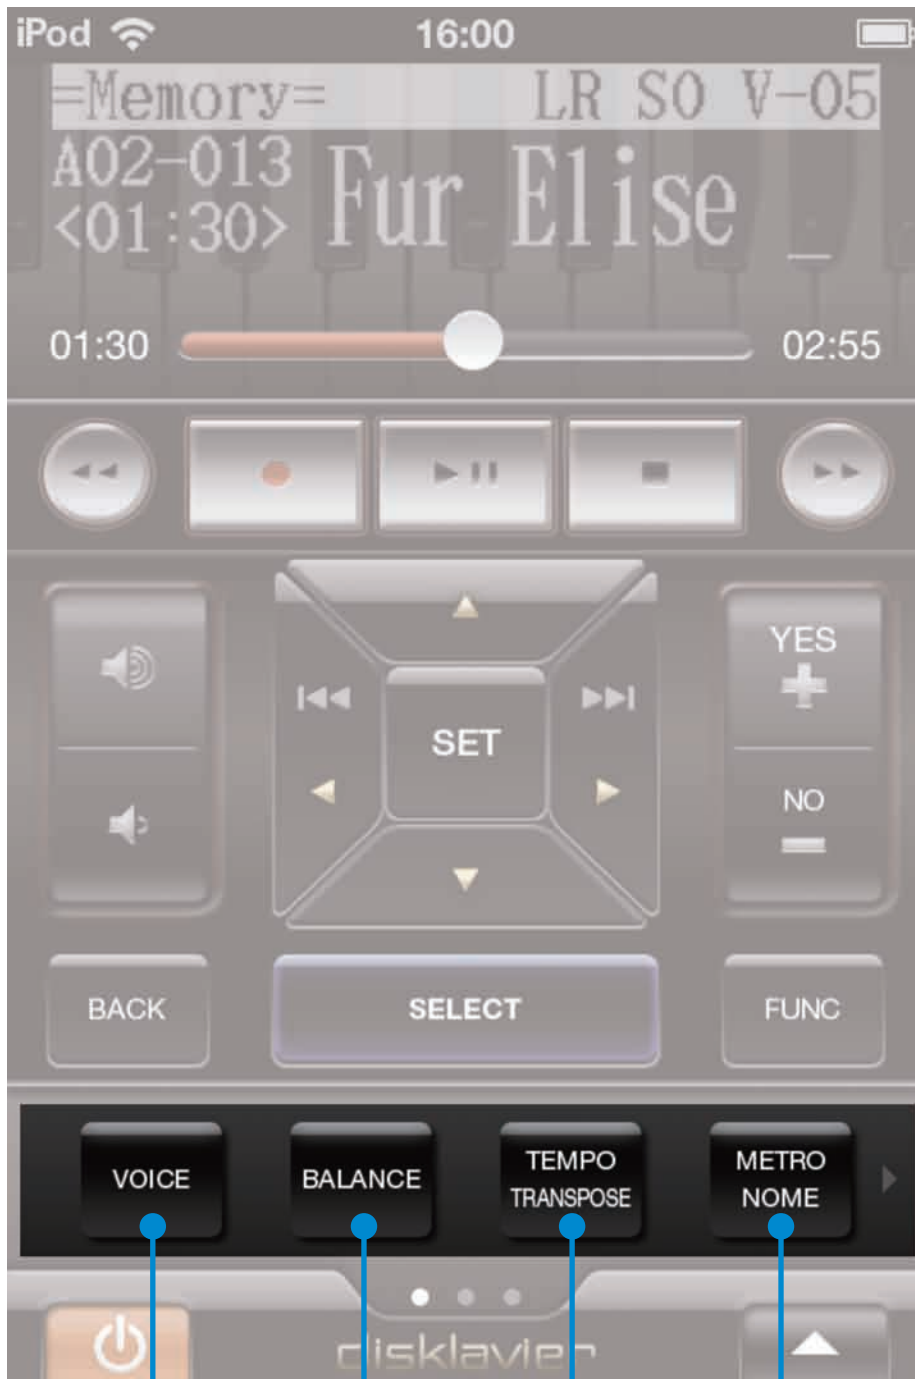

[METRONOME] button

[TEMPO TRANSPOSE] button


[BALANCE] button

[VOICE] button

The [BALANCE] and [TEMPO TRANSPOSE] buttons are described in the next section.

Button Contrast

Scroll Area

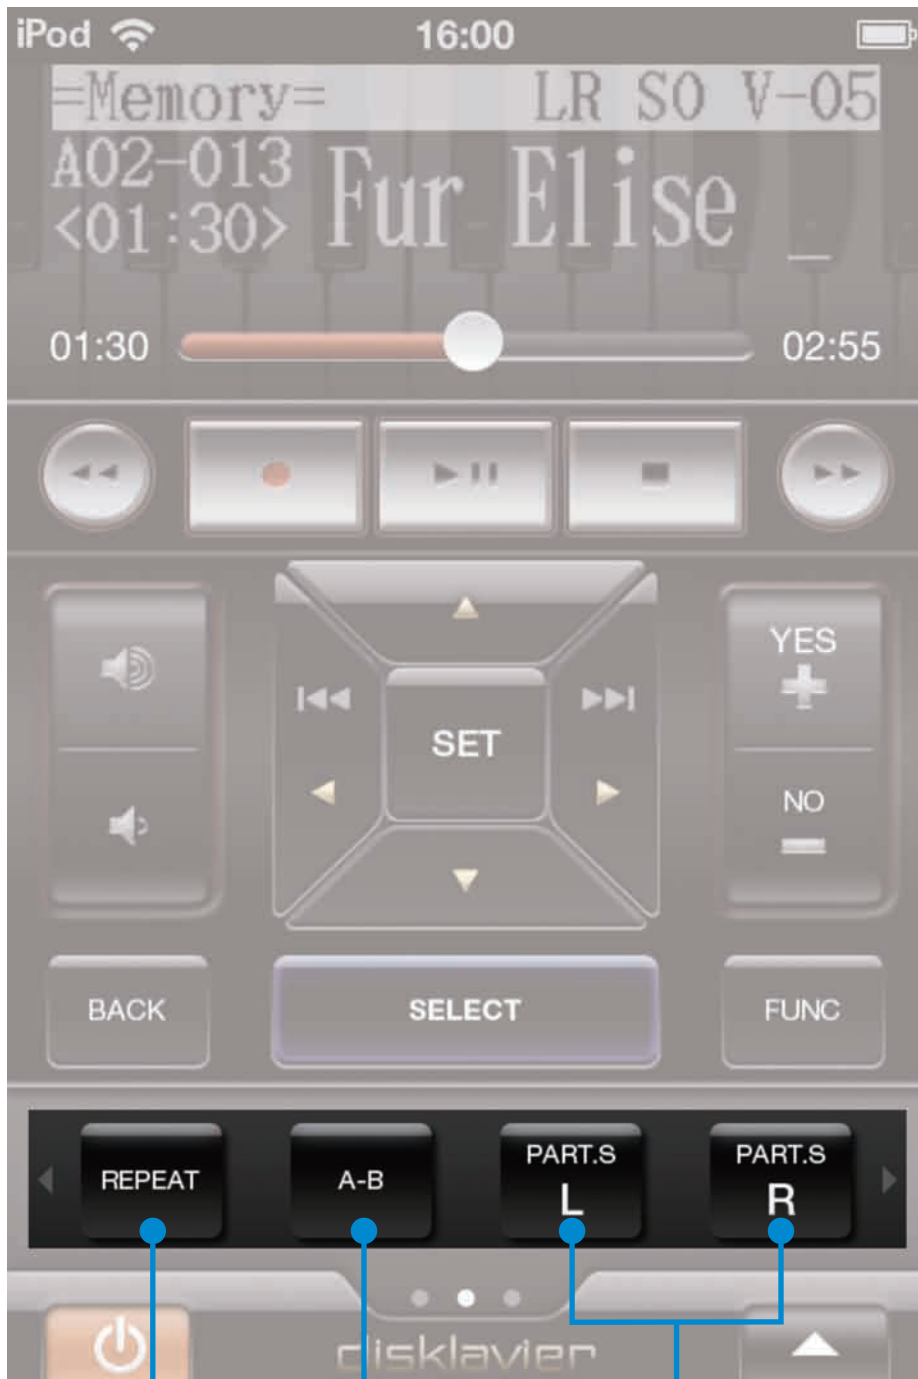

[REPEAT] button

[A-B] button

[PART SELECT] buttons

Button Contrast

Scroll Area



[NUMBER] button

[INTERNET] button


[SETUP] button

[SYSTEM] button

The [NUMBER] button is described in the next section.

Button Contrast

Pop-Up View

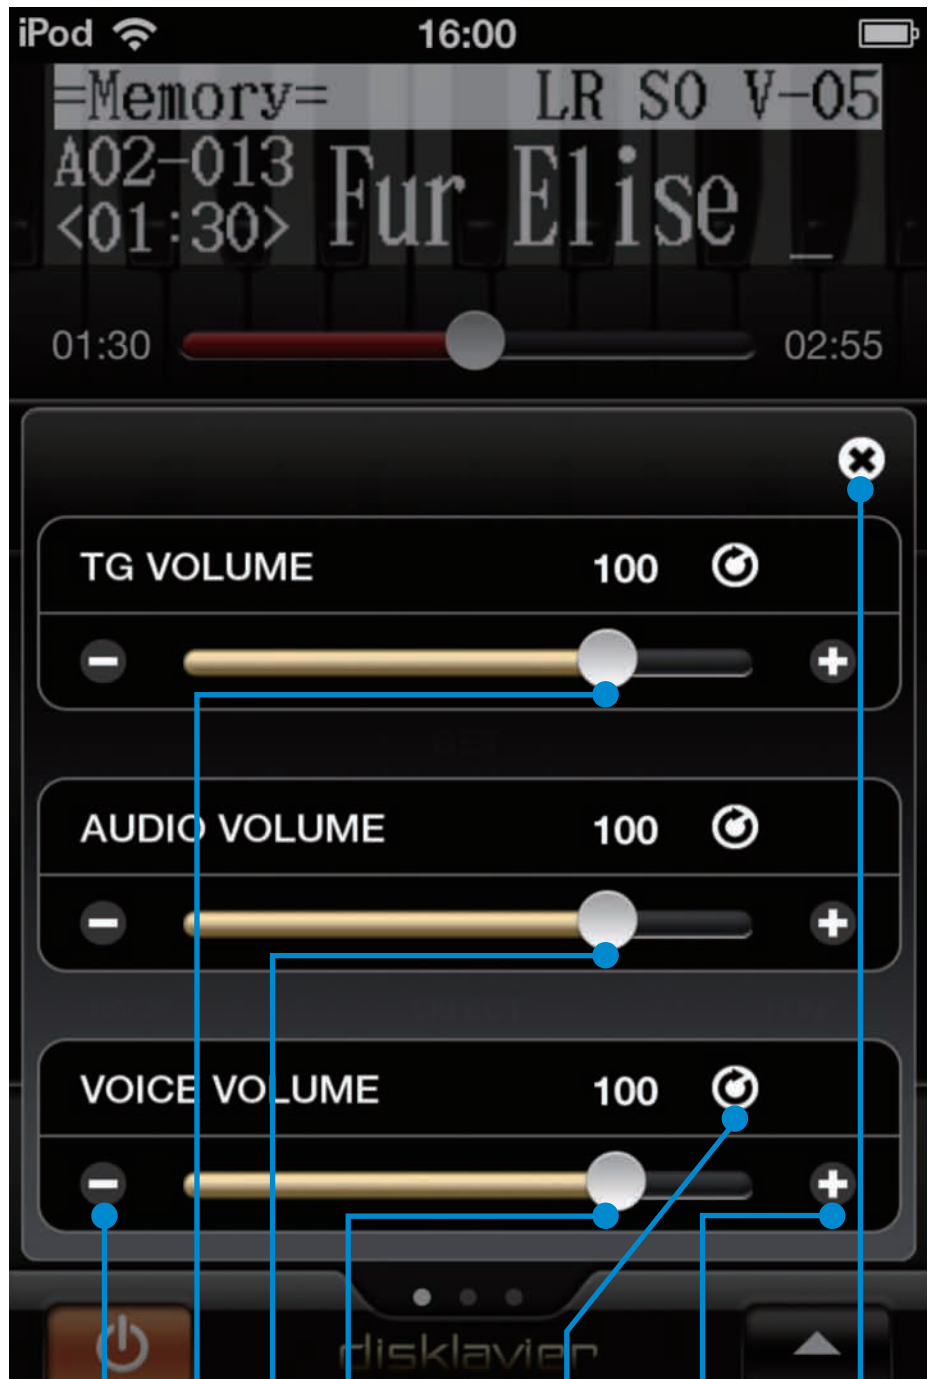

[-] button

[AUDIO] slider

[TG] slider

[RESET] button

[CLOSE] button

[+] button

[VOICE] slider

If you touch the **[BALANCE]** button, this view will pop up.

Button Contrast

Pop-Up View



[-] button

[TEMPO] slider

[TRANSPOSE] slider

[RESET] button


[+] button

[CLOSE] button

If you touch the [TEMPO TRANSPOSE] button, this view will pop up.

Button Contrast

Pop-Up View

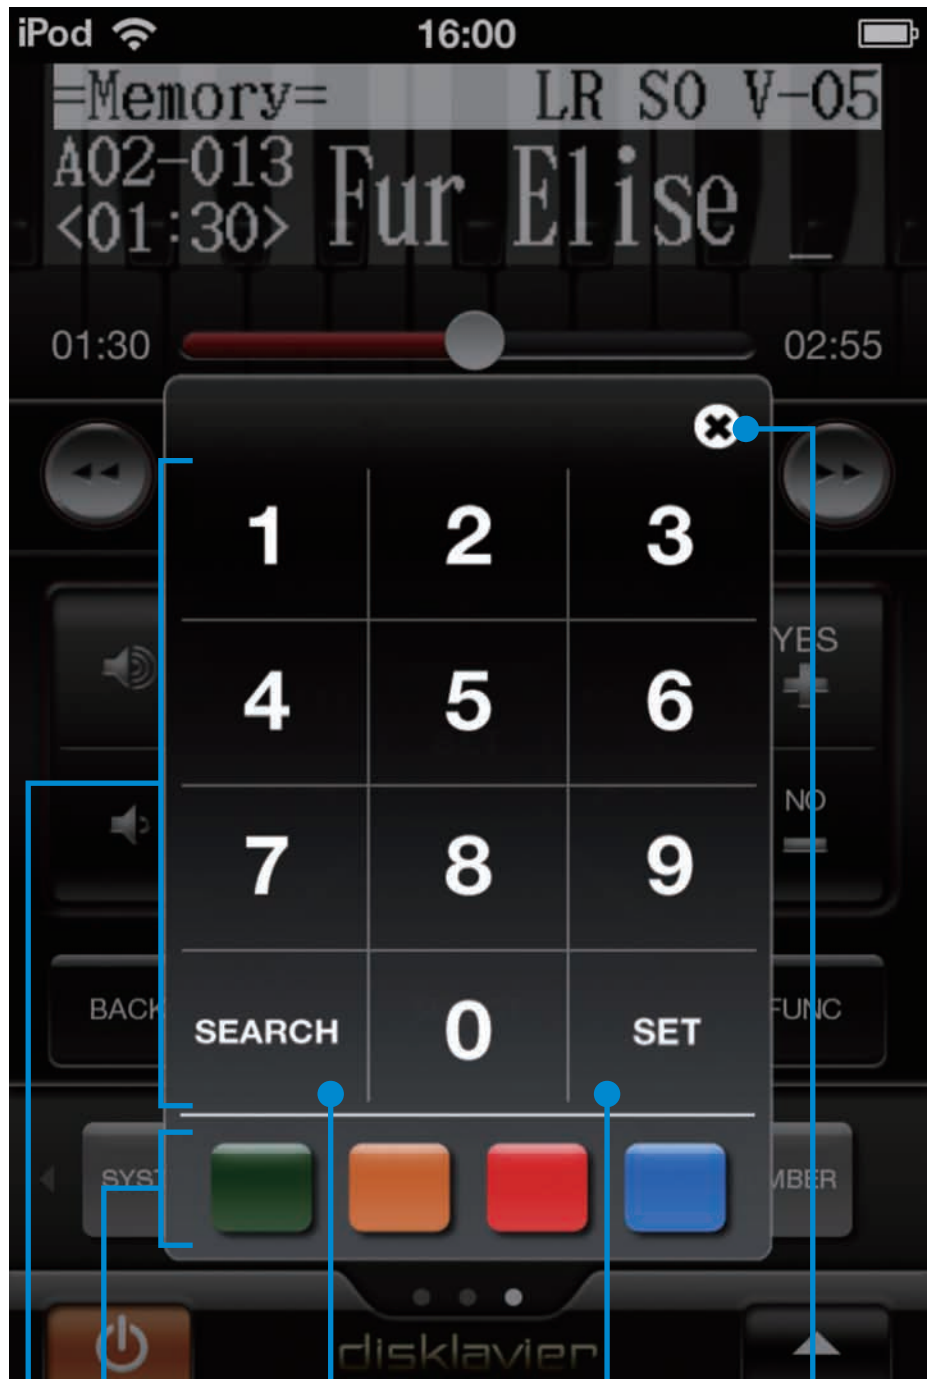

[SEARCH]
button

[SET] [CLOSE]
button button

Colored buttons

Numeric keypad

If you touch the [NUMBER] button, this view will pop up.

Other Features

Landscape View



Cursor buttons

Seek slider

Volume slider

[SET] button


[PLAY/PAUSE] button

[SELECT] button

If you rotate the device sideways, this view will appear.

Other Features

Option View

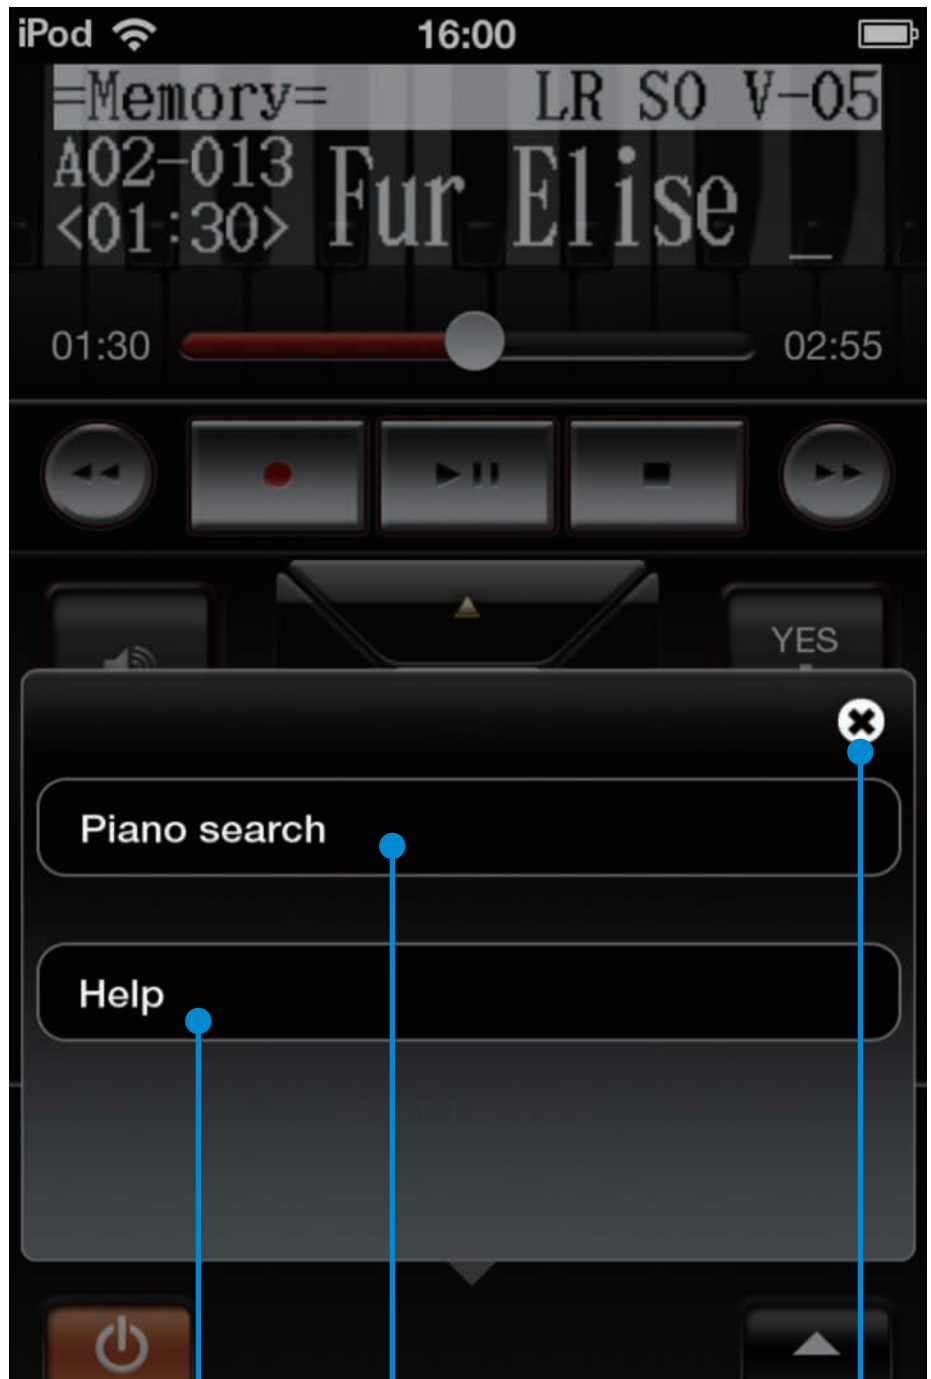

[HELP] button

[CLOSE] button


[PIANO SEARCH] button

If you touch the [OPTION] button (at the lower-right corner of the basic view), this view will pop up.

See the following sections for information on these buttons.

Other Features

Piano Search

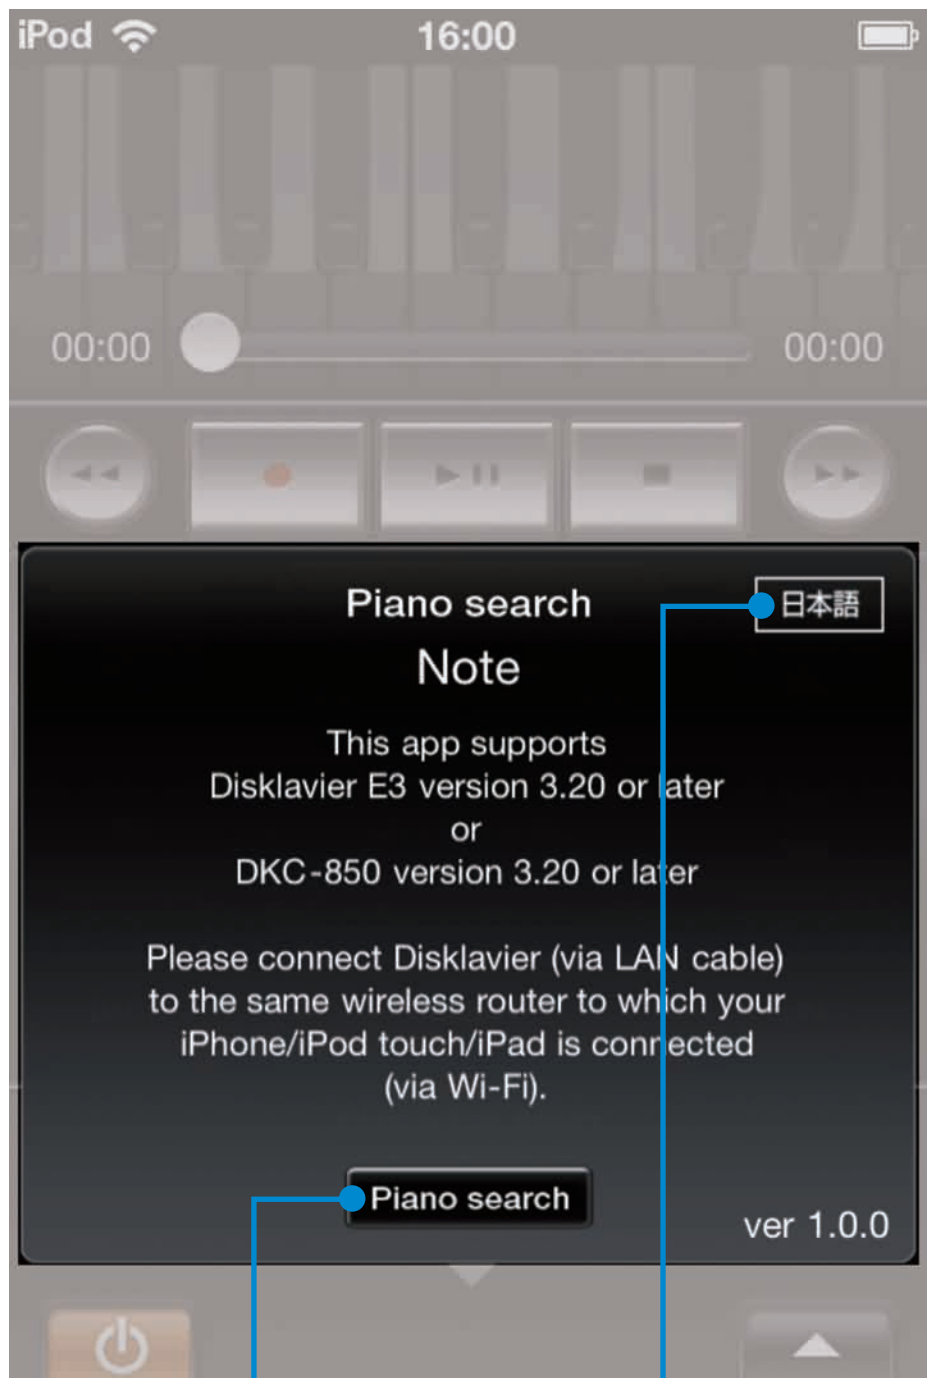


Language select button
(English, Japanese)
[PIANO SEARCH] button

If you touch the [PIANO SEARCH] button in option view, or when it is not connected to a piano, this view will pop up. When the language select button is touched, the display alternates between English and Japanese.

Other Features

Piano Search

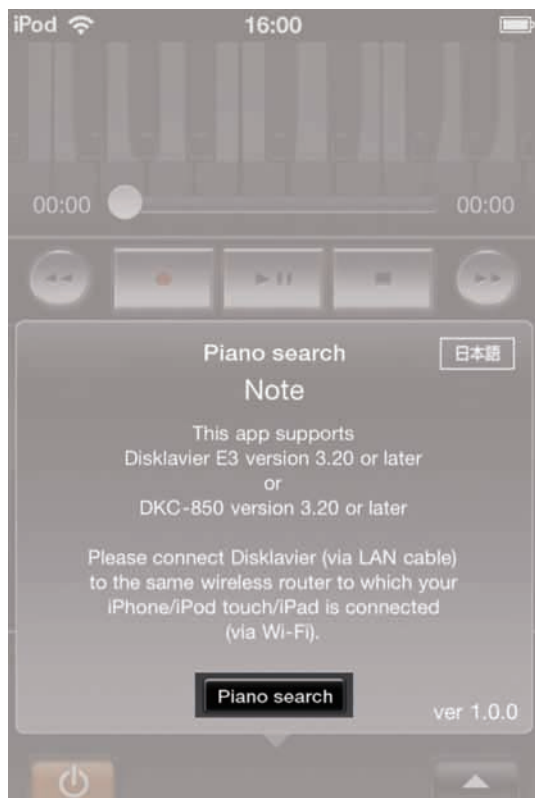

Piano list

[DEMO MODE] button

If you touch the [PIANO SEARCH] button, the piano search function will start and all found pianos will be listed.

Tap on the piano to which you would like to connect.

If you touch the [DEMO MODE] button, it will switch to the demo mode. While in demo mode, you can check the operations without being connected to a piano.

Other Features



Passcode View



When authentication is needed, this view will pop up. Enter the passcode you set on the Disklavier.

Other Features

Help View

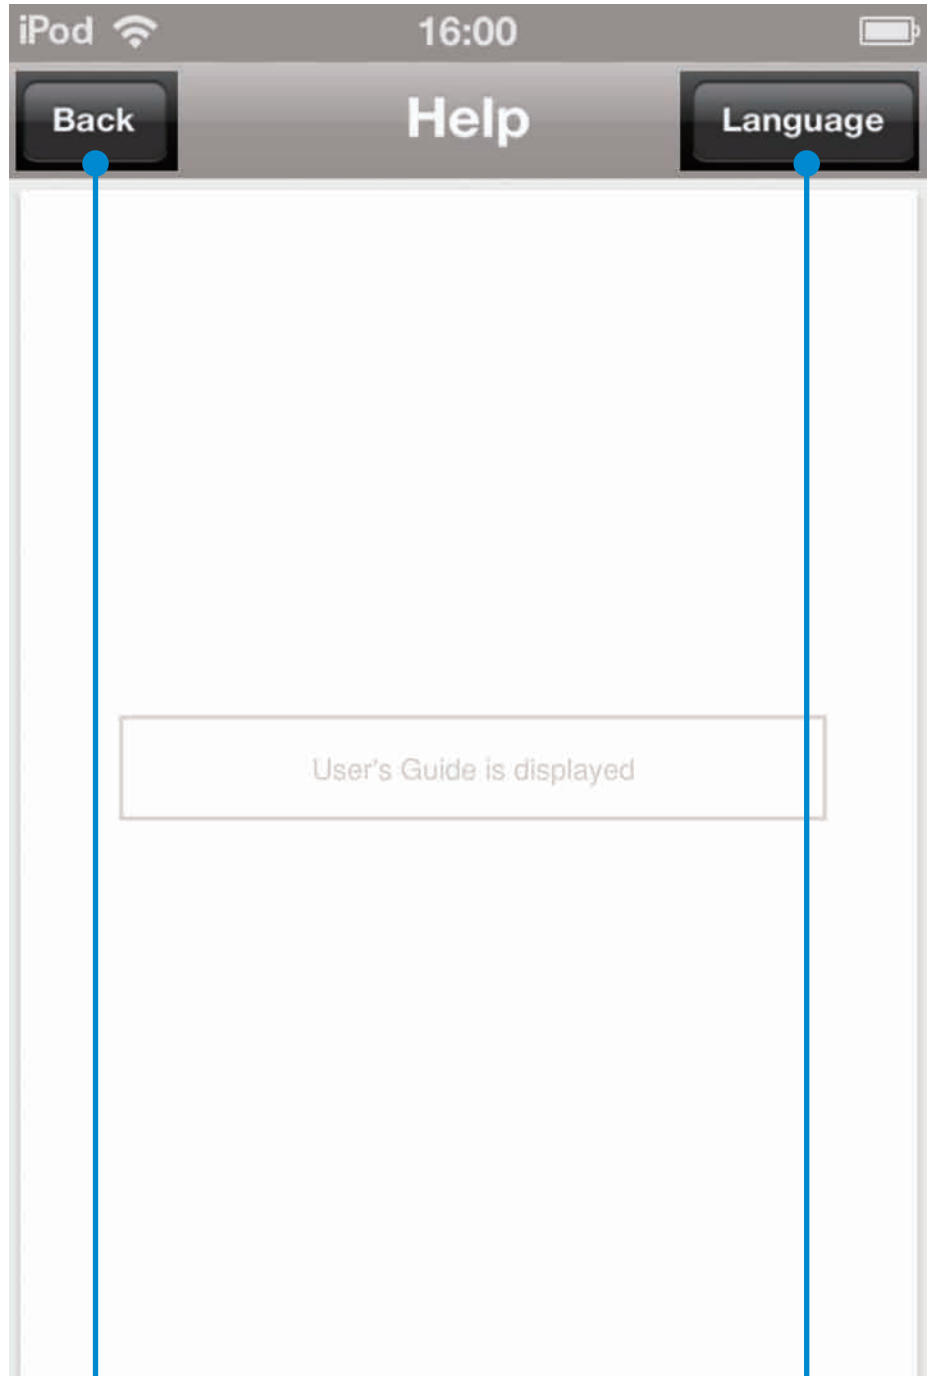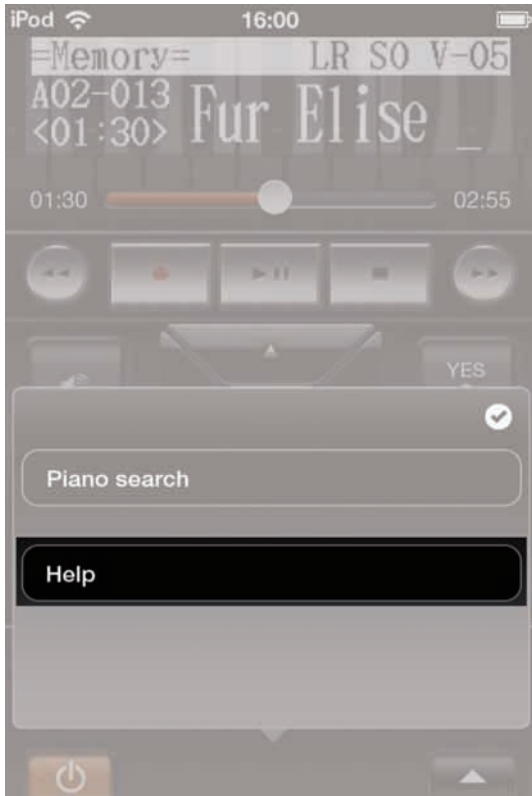


[BACK]
button

[LANGUAGE]
button

If you touch the [HELP] button in option view, this view will pop up.

Other Features

Help View

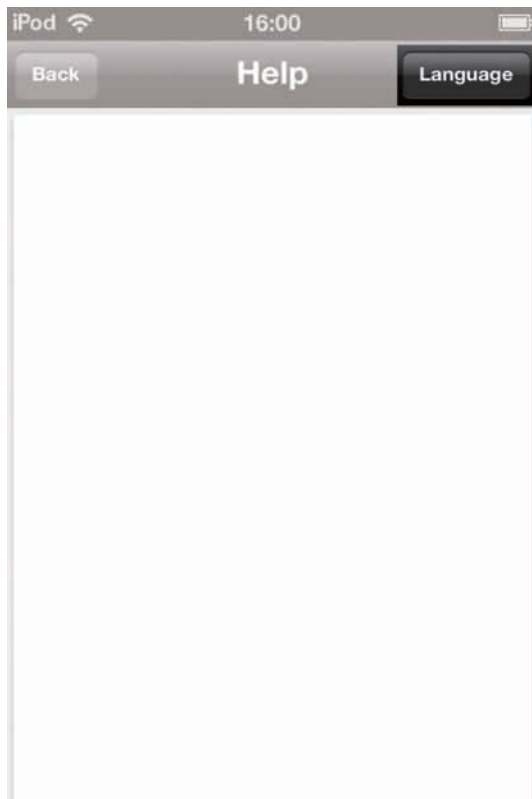

[CANCEL] button [DONE] button

If you touch the [LANGUAGE] button, this view will pop up. If you would like to change the language of the User's Guide, choose the language, then touch the [DONE] button.

Troubleshooting

Application cannot find the piano.

- Make sure your iPhone/iPod touch/iPad is connected to the same network to which your Disklavier is connected by LAN cable.
- Restart this application.
- If you have never found the piano, confirm the version of firmware of your Disklavier.
Version 3.20 or later is required.
- If the wireless router has several local networks, confirm that the Disklavier and the iOS device are connected to the same LAN.
For more detail, refer to the manual that came with your wireless router.

You forgot the passcode.

- Refer to the manual of your Disklavier and check the passcode.

Trademarks and Copyrights

- Yamaha and Disklavier are trademarks of Yamaha Corporation.
- Apple, iPhone and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries. iPad is a trademark of Apple Inc.



YAMAHA CORPORATION
P.O.Box 1, Hamamatsu, 430-8650 Japan